


13-21 RAM 1500 3.6L RIPP Catch Can Install Instructions






1. Attach the RIPP Catch Can behind the driver's side headlight using the supplied hardware. The spacer must be inserted underneath the catch can bracket.
2. Remove the factory PCV hose from the intake manifold bung and insert the plastic joint into the hose.
3. Connect the other end of the plastic joint to the inlet of the catch can using the supplied hose.
4. Connect the supplied hose from the outlet of the catch to the intake manifold bung.
5. **CRITICAL STEP: Only applicable if your vehicle is supercharged.** Install the RIPP PCV into outlet hose and onto the intake manifold bung. The arrows on the PCV must face toward the intake manifold. This PCV shuts when the manifold is pressurized by the supercharger. Failure to install the RIPP PCV this will allow boost pressure to enter the catch can and crank case.

Note: Catch Cans are not included with supercharger kits and must be purchased separately.

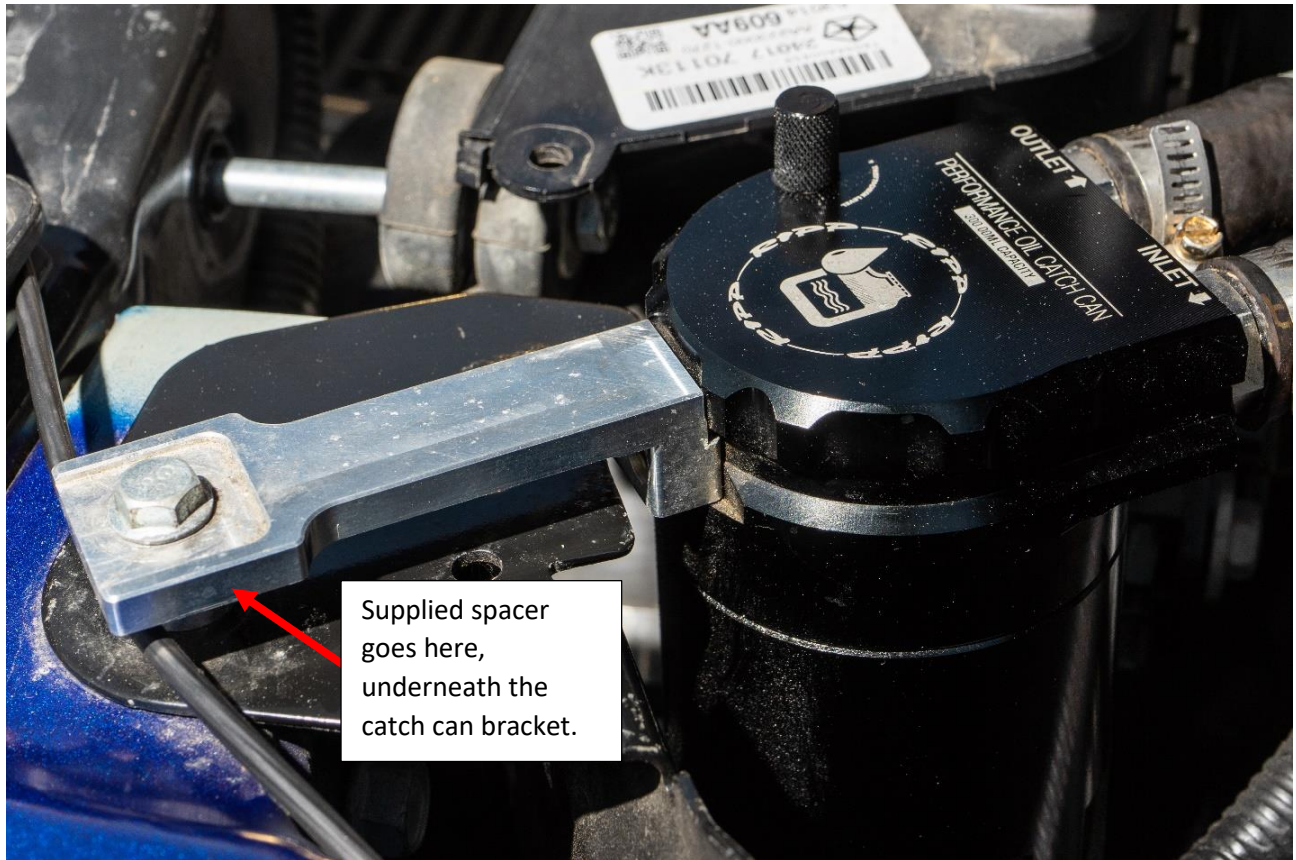

Supplied spacer goes here, underneath the catch can bracket.

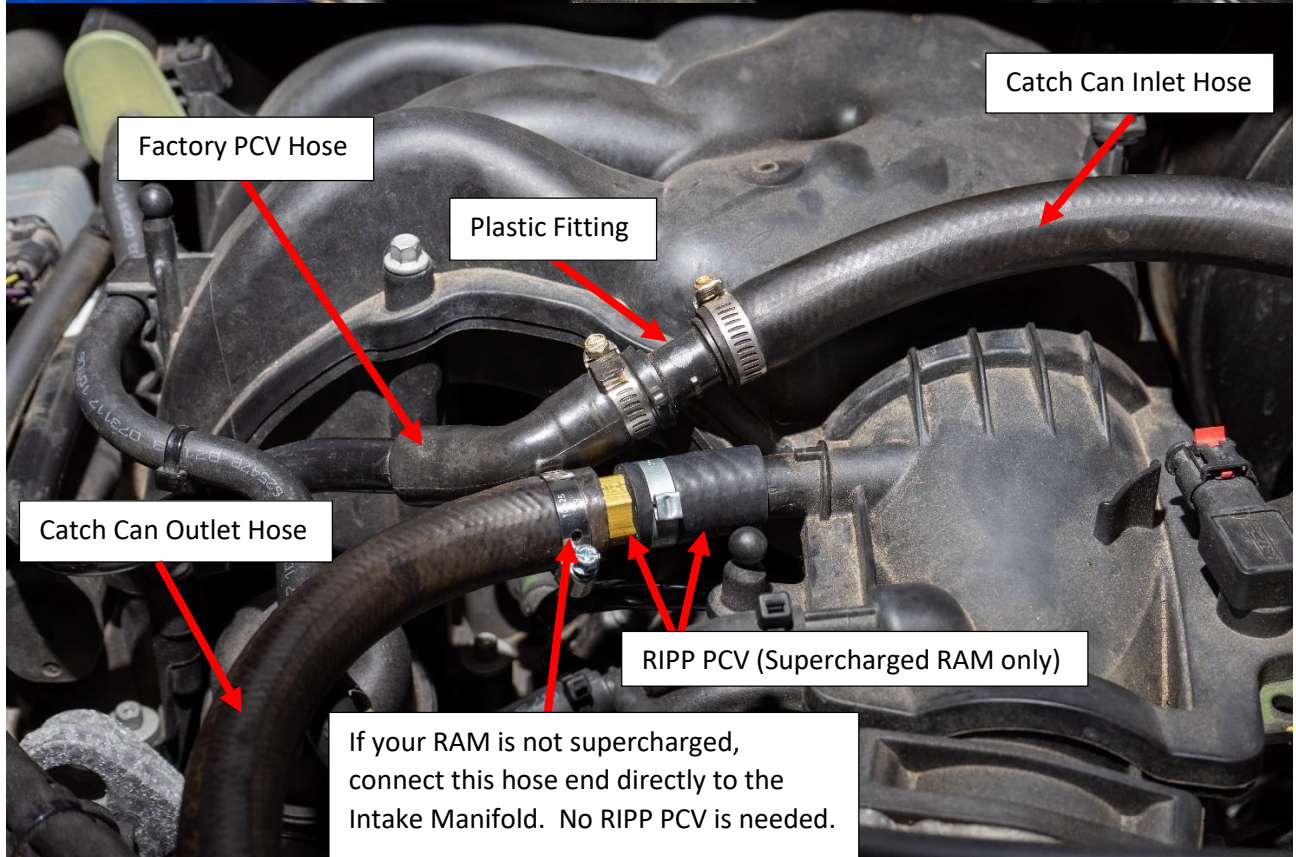

Factory PCV Hose

Catch Can Inlet Hose

Plastic Fitting

Catch Can Outlet Hose

RIPP PCV (Supercharged RAM only)

If your RAM is not supercharged, connect this hose end directly to the Intake Manifold. No RIPP PCV is needed.

